



SEAL
ABLE

pioneers in profiles

INSTALLATION INSTRUCTION

hydrophilic round cord into mixed seal gasket

INSTALLATION INSTRUCTION HYDROPHILIC ROUND CORD INTO MIXED SEAL GASKET

1 | DELIVERED TOOLS

Use the tool and round cord supplied by SEALABLE to install the swelling material.



2 | INSERT CORD



The cord is inserted from the back of the tool until a piece peeks out at the front.

3 | ENTER CORD INTO THE GASKET GROOVE



Before installing the hydrophilic round cord in the profile frame, it should be dry and clean. Press the tip of the tool into the recess provided for the cord in the centre of the profile. Pull along the profile with sufficient pressure.



4 | EXECUTION OF THE CORNER

Along the corners it is helpful if the swelling cord is fixed in the groove with one hand. Do not remove the tool from the groove at the corner. Continue to trace the angle with even pressure.



INSTALLATION INSTRUCTION HYDROPHILIC ROUND CORD INTO MIXED SEAL GASKET

5 | CONNECTING

After the round cord has been inserted into the complete gasket frame, the beginning and end must be joined together.



To do this, guide the line so far into the profile until you have reached the starting piece. Then take the tool out of the groove and cut the round cord a little longer than the available space.




6 | FINISHING



Press the remaining piece into the groove and the assembly of the round cord is finished. There must be no gap (hollow space) between the beginning and the end of the cord.



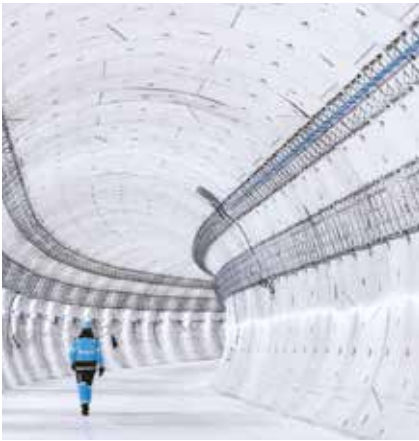

CONTACT

RESEARCH & DEVELOPMENT

Oliver Pasemann
T +49 3622 633 469
M +49 152 5313 2247
oliver.pasemann@seal-able.com

APPLICATION ENGINEER

Mark Fischer
M +49 151 1464 8844
mark.fischer@seal-able.com



SALES

Peter Tiedemann
M +1 732 7636 203
peter.tiedemann@seal-able.com

Gilles Mauchamp
M +33 680 388 956
gilles.mauchamp@seal-able.com

SEALABLE Solutions GmbH

Eisenacher Landstr. 70
99880 Waltershausen
Germany
info@seal-able.com
www.seal-able.com

